

# Operations Manual TAL-1100M/R

Manual Round Product Label Applicator





TAL-1100MR SET UP

### Helpful setup videos can be found on included USB or at www.take-a-label.com

- 1. Remove outer unwind disc (27) install new roll of labels and replace disc.
- 2. Pull label web under the idler roller (12A) and Label Stop Pointer (10) and out to the front of the applicator.
- **3.** Rotate Application Brush (22) up to allow web clearance.
- **4.** Pull web around the peel plate (3).
- 5. Pull web back and over roller (12B) and down to the waste wind shaft (25); attach the liner to the waste wind shaft using the Waste Wind clip (26).
- **6.** Turn the operating handle (1) a few times to align label web.

#### **SETTING LABEL STOP POINTER:**

- 1. The Label Stop Pointer (10) can be adjusted as needed to locate the gap between labels, certain information or graphics.
- **2.** Loosen the thumb screw to move the Label Stop Pointer.
- **3.** Re-tighten when desired location is found.





# **TAL-1100MR**


## PRODUCT CARRIAGE ADJUSTMENT


- 1. Loosen the thumb screws under the product support rollers (5)
- 2. Adjust rollers so your product is centered under the Peel Edge. The product should be setting on the rollers so it will roll easily. Keep the center of the bottle lined up with the peel edge. It is also often useful to have a slight downward angle to the carriage.
- **3.** To raise or lower the product carriage, loosen the two product Carriage Ratchet Handles (8) on the main frame (2).
- **4.** Raise the carriage to make a gap of approximately 1/16" between the bottom of the peel plate and the product.
- **5.** Rotate Application Brush (22) down to help apply labels to product.





# **TAL-1100MR**DISPENSER PARTS LIST

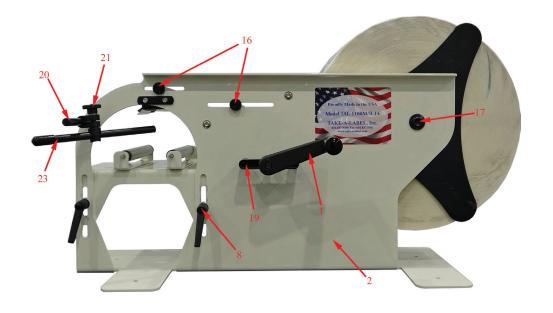

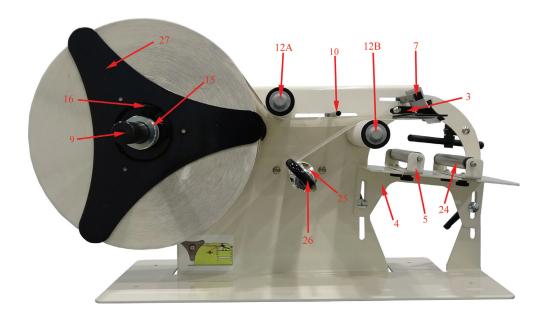

Item#	Description	#
451	Handle	1
11001	Main Fram	2
11002	Peel Plate	3
11003	Carriage Support	4
11004	Roller Support Bracket	5
11006	Wipe Down Brush Bar	7
11007	Carriage Ratchet Handle	8
11008	Unwind Shaft	9
11009	Label Stop Pointer	10
11010	1/4-20 5/8" Carriage Bolt	11
31004	Idler Roller (A, B)	12
25112	Washer	13
25113	Spring	14
26001	Collar	15
26002	Hub Screw	16
30653	1/2 -13 BHSCS	17
31015	Plastic Bearing	18
31060	Rewind Bracket	19
31366	Extension Rod	20
31370	Guide Clamp	21
31501	Brush and Holder	22
31803	Guild Rod Support Shaft	23
37007	Product Rollers	24
45129	Waste Wind Shaft	25
45131	Waste Wind Clip	26
45136	Unwind Disc	27
72618	Felt Pad	28

Effective: Febuary 2020
Prices are F.O.B. Nunica, Michigan
Terms are net 15 days
Prices are subject to change without notice