




OPERATIONS MANUAL
MODEL TAL-1100M/R
MANUAL ROUND PRODUCT
LABEL APPLICATOR



TAKE-A-LABEL®
16900 Power Dr.
Nunica, MI 49448
Phone: (616) 837-9300
Fax: (616) 937-9301
<http://www.take-a-label.com>
E-Mail sales@take-a-label.com

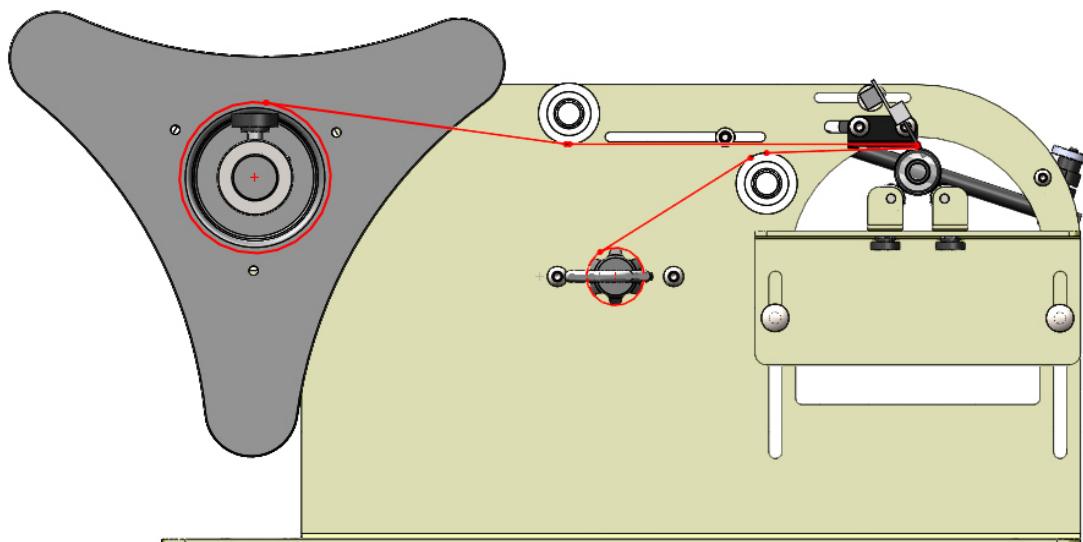

TAL-1100MR Manual Round Product Applicator

1. Remove outer unwind disc (22) install new roll of labels and replace disc.
2. Pull label web under the idler roller (13) and gap pointer (4) and out to the front of the applicator.
3. Rotate application brush (17) up to allow web clearance.
4. Pull web around the peel plate (1).
5. Pull web back and above the bottom of roller (13B) and down to the waste wind shaft (18); attach the liner to the waste wind shaft using the clip (19).
6. Turn the operating handle (6) a few times to align label web.



Setting label stop pointer:

1. The label stop pointer (4) can be adjusted as needed to locate the gap between labels or certain information or graphics.
2. Loosen the thumb screw to move the label stop.
3. Re-tighten when desired location is found.

Product Carriage Adjustment:

1. Loosen the thumb screws under the product support rollers (5). Adjust rollers so your product is in the center of the rollers.
2. The product should be setting on the rollers so it will roll easily. Keep the center of the bottle lined up with the peel edge. Do not place the product too deep between the support rollers, or it may not roll smoothly.
3. To raise or lower the product carriage, loosen the two product carriage handles (10) on the main frame (3).
4. Raise the carriage to make a gap of approximately 1/16" between the bottom of the peel plate and the product.
5. Rotate application brush (16) down to help stick labels to product.

TAKE-A-LABEL

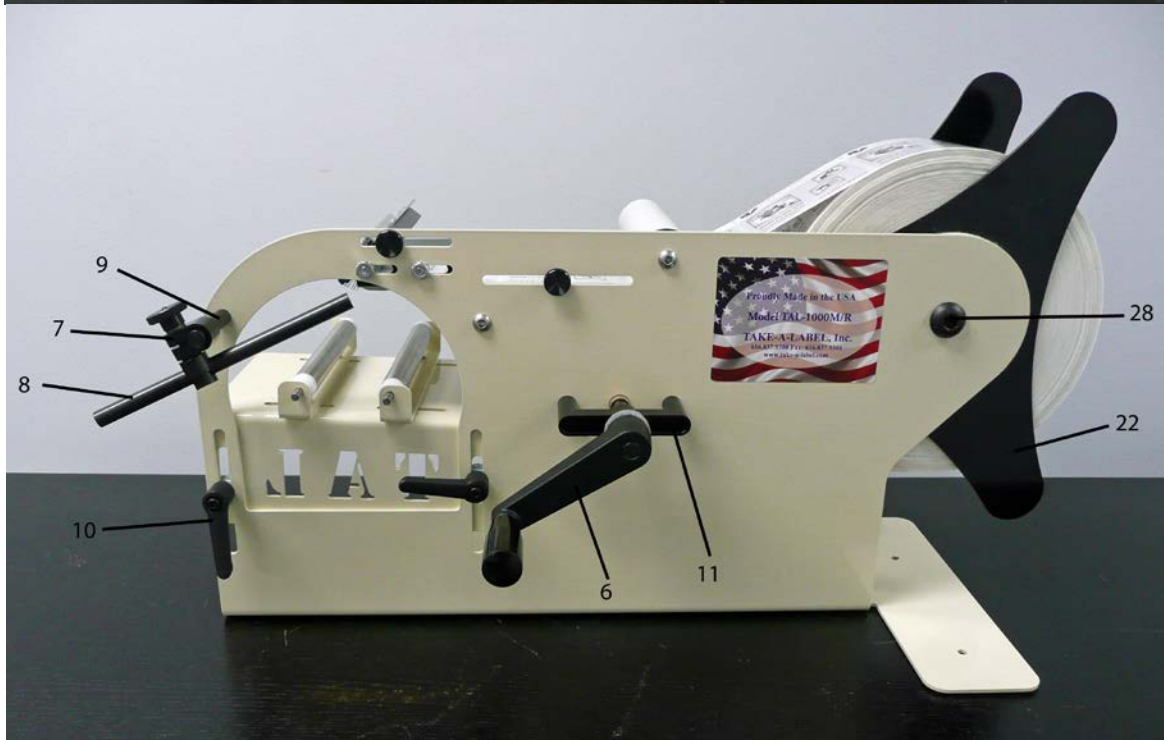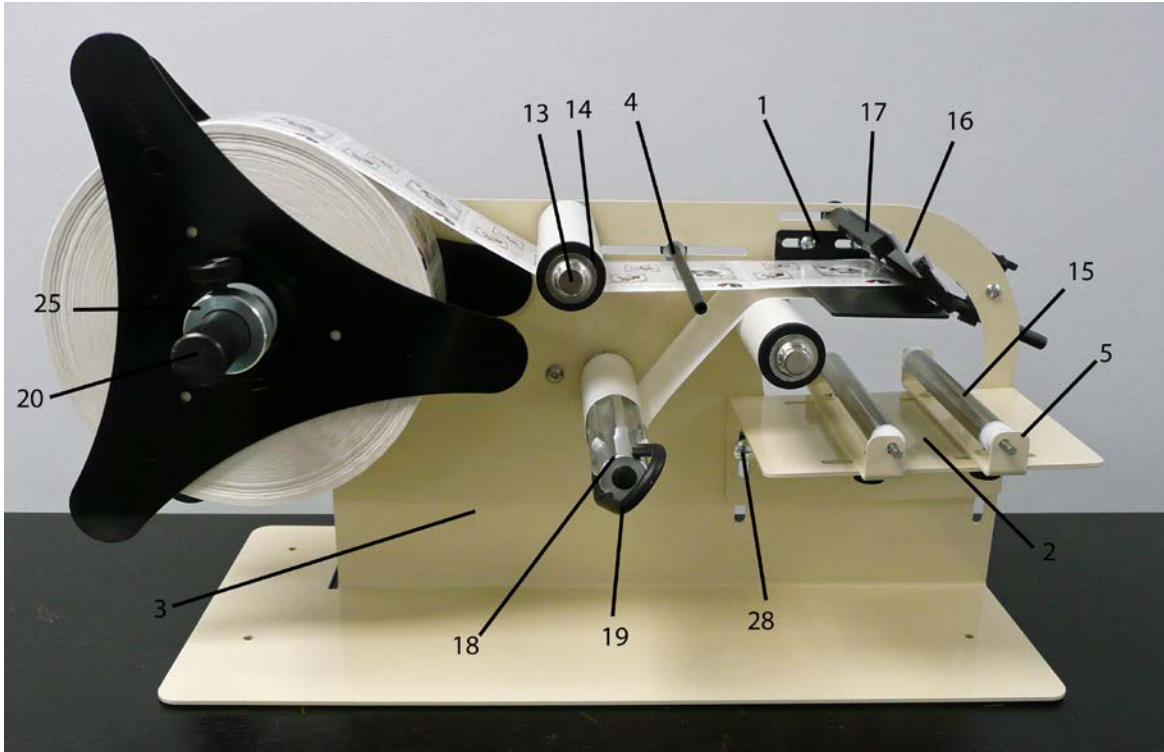



<p style="text-align: center;">TAKE-A-LABEL, Inc. Take-A-Label Dispenser Parts List TAL-1100MR</p>

<u>Item #</u>	<u>Description</u>	<u>#</u>
451	Handle	6
11001	Main Frame	3
11002	Peel Plate	1
11003	Carriage Support	2
11004	Roller Support Bracket	5
11005	Guide Rod Support Post	9
11006	Wipe Down Brush Bar	17
11007	Carriage Ratchet Handle	10
11008	Unwind Shaft	20
11009	Pointer	4
11010	1/4-20 5/8" Carriage Bolt	28
21011	Idler Roller Rod	13
25112	Washer	24
25113	Spring	23
26001	Collar	25
26002	Hub Screw	26
30653	1/2 -13 BHSCS	27
31015	Plastic Bearing	14
31060	Rewind Bracket	11
31366	Extension Rod	8
31370	Guide Clamp	7
31501	Brush and Holder	16
31506	4" Pivot Rod	12
37007	Product Rollers	15
45129	W/W Shaft	18
45131	Clip	19
45136	Disc	22
72618	Felt Pad	21

Effective: September 2013

Prices are F.O.B. Nunica, Michigan

Terms are net 15 days

Prices are subject to change without notice